

MASTERMAX™

PREPMAX

Timber Clean & Prep

Concentrate • 4 litres makes 20 litres

Cleans, Brightens, Treats Mould



“Preparation is the key”

PREPMAX must be used to clean and prepare timber decks

- Timber cleaner for the preparation of all new, weathered, greyed and mould affected decking and timber surfaces
- Cleans, treats & removes dirt, mould, mildew, grease, oil & other contaminants
- Assists in opening the fibres to aid penetration of the timber surface prior to coating
- Available in 1 litre and 4 litres

Exclusive to

MITRE 10




MASTERMAX™

PREPMAX

Timber Clean & Prep Concentrate 4 litres makes 20 litres

Substrate	Preparation Required
New Pine Decks	New decking timber should be weathered for 8 weeks. Clean and treat with PREPMAX before the application of a coating - this also opens the fibres to aid penetration. Note: Shiny (mill glazed) machined timber surfaces should be sanded to allow penetration.
New Hardwood Decks	We recommend hardwood timbers be weathered for 12 weeks before the application of a coating. This is to assist with the removal of oily tannins and opens the fibres to aid penetration. Rinsing with water several times over this period is beneficial in addition to the use of PREPMAX to prepare the surface.
If mould or mildew is present	Pre-treat the timber surfaces in advance with PREPMAX and leave for at least 2 weeks, then remove any dead material by scraping, scrubbing or sanding. Re-clean the surface with PREPMAX before the application of a coating.
Weathered Decks - Pine & Hardwood	If the natural wood grain is to be restored, badly weathered and greyed timber may require sanding back to a clean sound surface. Clean and treat with PREPMAX before the application of a coating - this also opens the fibres to aid penetration.
Previously Stained & Oiled Timber Decks	Clean and treat with PREPMAX. If a more natural wood grain look is required, it may be necessary to sand back to bare timber followed by cleaning and treating with PREPMAX before the application of a coating. To remove paint or other coatings back to a bare surface, a combination of paint remover and sanding should be used followed by PREPMAX.
Other Timber Surfaces eg fences	Treat mould and moss with a GET-GONE Fungicidal Cleaner or a proprietary fungicidal product. Use PREPMAX for a more aggressive preparation if required.

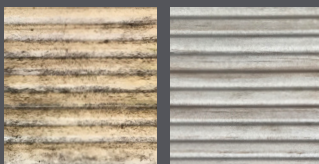

Before

After

BEFORE YOU START...

Ensure you read and understand ALL instructions before use.

We highly recommend downloading the safety and technical data sheets before use via the QR code or website.

Wear suitable and adequate eye protection, overalls, footwear, waterproof gloves.



MASTERMAX™

Proudly made by Agrippa Paints Ltd

Christchurch, New Zealand
Phone 0800 300 585 - www.MASTERMAX.co.nz

